
RO
ENG

DAEWOO

Cuptor cu microunde
MANUAL DE INSTRUCȚIUNI

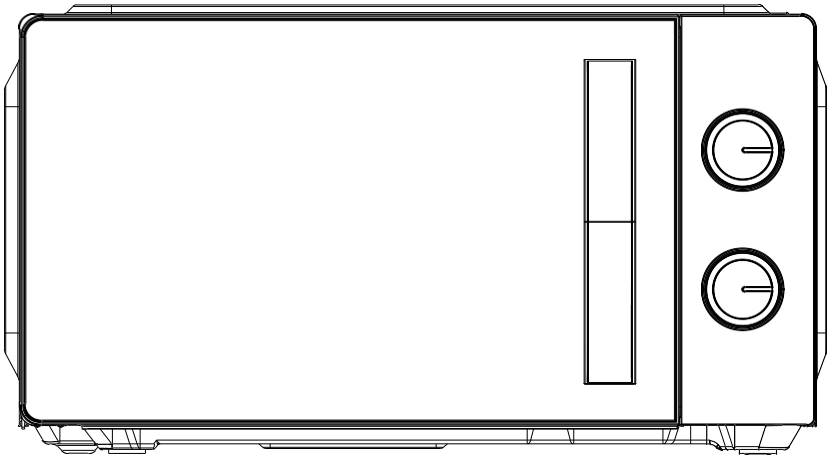

Modele:

KOR-6M20W / KOR-6M20BK

INSTRUCȚIUNI DE SIGURANȚĂ IMPORTANTE
Citiți cu atenție și păstrați pentru consultări viitoare.
Doar pentru uz casnic.

MĂSURI DE SIGURANȚĂ IMPORTANTE

AVERTISMENT: Dacă ușa sau garniturile ușii sunt deteriorate, cuptorul nu trebuie utilizat până nu este reparat de o persoană calificată.

AVERTISMENT: Este periculos ca oricine, în afară de personalul autorizat, să efectueze reparații care implică îndepărtarea capacelor de protecție împotriva radiațiilor cu microunde. **AVERTISMENT:** Nu încălziți lichide sau alimente în recipiente sigilate, acestea pot exploda.

1. Folosiți doar vase compatibile cu utilizarea în cuptoare cu microunde.
2. Nu introduceți recipiente metalice în cuptor în timpul gătirii cu microunde.
3. La încălzirea alimentelor în recipiente din plastic sau hârtie, supravegheați aparatul din cauza riscului de aprindere.
4. Acest cuptor este destinat exclusiv încălzirii alimentelor și băuturilor. Nu folosiți pentru uscarea alimentelor, hainelor sau a altor obiecte (perne termice, papuci, bureți, cârpe umede etc.) — risc de arsuri, incendiu sau accident.
5. Dacă apare fum, opriți sau scoateți aparatul din priză și **nu deschideți ușa** pentru a limita răspândirea flăcărilor.
6. Conținutul biberoanelor și borcănașelor pentru bebeluși trebuie amestecat și testat înainte de a fi oferit copilului, pentru a evita arsurile.
7. Nu încălziți ouă întregi (cu sau fără coajă) — pot exploda chiar și după oprirea cuptorului.
8. Necurățarea regulată a cuptorului poate duce la degradarea suprafețelor și la situații periculoase.
9. Aparatul **nu trebuie instalat într-un dulap** închis.
10. Aveți grijă să nu deplasați platoul rotativ când scoateți vasele din cuptor.

11. **Nu curățați aparatul cu un aparat de curățare cu aburi.**

AVERTISMENT: În modul combinat (microunde + funcții suplimentare), copiii pot utiliza cuptorul **numai sub supravegherea unui adult** deoarece se generează temperaturi înalte.



ATENȚIE: SUPRAFAȚĂ FIERBINTE

Dacă cablul de alimentare este deteriorat, acesta trebuie înlocuit de producător, de un centru de service autorizat sau de o persoană calificată.

12. Acest aparat poate fi folosit de copii peste 8 ani și de persoane cu capacități fizice sau psihice reduse **doar dacă** au fost instruite privind utilizarea în siguranță și **înțeleg riscurile implicate.**
13. Copiii **nu trebuie** să se joace cu aparatul.
14. Curățarea și întreținerea aparatului **nu trebuie efectuate de copii nesupravegheați.**
15. Nu turnați apă rece direct pe platoul de sticlă după utilizare. Lăsați-l să se răcească timp de cel puțin 20 de minute înainte de a-l introduce în apă, pentru a evita crăparea acestuia.

Aparat din Grup 2, Clasa B (echipamente ISM):

Grup 2: emite intenționat energie de radiofrecvență pentru tratamente electromagnetice (ex. sudură cu arc).

Clasa B: destinat uzului casnic și conexiunilor la rețele electrice de joasă tensiune.

16. Sursa internă de lumină este un LED cu o intensitate < 60 lumeni.
17. Pentru a respecta standardul **EN 61000-3-11**, aparatul trebuie conectat doar la o rețea electrică cu

impedanța ≤ 0.40089 ohmi.

- **Înainte de a conecta aparatul la rețeaua publică**, consultați furnizorul local de energie pentru a verifica dacă instalația respectă această cerință.

18. După conectare sau încheierea utilizării, aparatul intră automat în modul *standby* cu consum redus: **< 0.3W**.

INSTALARE

1. Scoateți toate materialele de ambalaj. Dacă există o folie de protecție pe cuptor, îndepărtați-o înainte de utilizare. Verificați cu atenție dacă există daune. În caz de probleme, contactați imediat distribuitorul sau trimiteți produsul către un centru de service autorizat.
2. Cuptorul cu microunde trebuie amplasat într-un mediu uscat, lipsit de vapori corozivi și ferit de surse de căldură și umiditate (ex. aragazuri, chiuvete sau rezervoare de apă).
3. Pentru a asigura o ventilare corespunzătoare:
    - Lăsați cel puțin 20 cm în spatele cuptorului
    - Minim 5 cm pe laterale
    - Minim 20 cm deasupra
    - Cuptorul trebuie amplasat la cel puțin 85 cm deasupra solului
4. Nu amplasați cuptorul lângă televizor, radio sau antenă — la mai puțin de 5 metri — deoarece pot apărea interferențe sau distorsiuni ale imaginii și sunetului.
5. Aparatul trebuie poziționat astfel încât ștecărul să fie ușor accesibil și conectarea la priză să fie corect împământată, pentru a preveni riscul de electrocutare în cazul unor scurgeri de curent.

6. Cuptorul trebuie utilizat doar cu ușa închisă.
7. Nu amplasați cuptorul într-un dulap — este destinat doar utilizării independente, pe blat sau suport deschis.
8. Din cauza reziduurilor de fabricație sau a uleiului de pe pereții interiori și elementul de încălzire, la primele utilizări pot apărea mirosuri specifice sau ușoare urme de fum — este un fenomen normal și va dispărea după câteva utilizări.
    - Se recomandă să introduceți o cană cu apă în interiorul cuptorului și să-l porniți la putere maximă pentru câteva cicluri, lăsând ușa sau o fereastră deschisă pentru aerisire.

CURĂȚARE

⚠ ATENȚIE

Cuptorul trebuie curățat regulat, iar orice reziduuri de alimentetrebuie îndepărtate.

⚠ AVERTISMENT

a. a. Deconectați aparatul de la priză înainte de a-l curăța. Lăsați-l să se răcească înainte de a începe curățarea. **Nu scufundați aparatul în apă sau alte lichide**.
b. Necurățarea corespunzătoare a cuptorului poate duce la deteriorarea suprafețelor, afectând astfel durata de viață a aparatului și posibil creând o situație periculoasă.
c. **Nu folosiți detergenti duri, benzină, praf abraziv sau perii metalice** pentru a curăța orice parte a aparatului.
d. Nu îndepărtați capacul ghidajului de undă.
e. După o perioadă lungă de utilizare, pot apărea mirosuri neplăcute în interiorul cuptorului. Puteți scăpa de aceste mirosuri folosind una dintre următoarele metode:

1) Puneți câteva felii de lămâie într-o cană și încălziți-le la

putere maximă timp de 2-3 minute.

2) Puneți o cană de ceai roșu în cuptor și încălziți-o la putere maximă.
3) Puneți coji de portocală în cuptor și încălziți-le la putere maretimp de 1 minut.

f. Când aparatul nu este utilizat, trebuie să fie depozitat într-unloc uscat și bine ventilat.

⚠ AVERTISMENT

INSTRUCȚIUNI PENTRU CURĂȚAREA SUPRAFEȚELOR CARE VIN ÎN CONTACT CU ALIMENTELE

După fiecare utilizare, ștergeți capacul ghidajului de undă cu o cârpă umedă, apoi cu una uscată pentru a îndepărta stropii de mâncare și grăsimea acumulată. Grăsimea acumulată poate supraîncălzi și poate provoca fum sau incendiu.

SFATURI PENTRU CURĂȚARE

Exterior:
Ștergeți carcasa cu o cârpă moale ușor umezită.


Ușa:
Folosiți o cârpă moale umezită pentru a curăța ușa și fereastra. Ștergeți garniturile ușii și părțile adiacente pentru a îndepărta orice stropi sau reziduuri.

Panoul de control:
Ștergeți panoul de control cu o cârpă moale ușor umedă.

Pereții interiori:
Ștergeți pereții interiori ai cuptorului cu o cârpă moale umezită. Ștergeți capacul ghidajului de undă pentru a îndepărta oriceresturi de mâncare.

Platou rotativ / Inel de rotație / Ax de rotație:
Spălați-le cu apă și săpun ușor.
Clătiți cu apă curată și lăsați-le să se usuce complet.

PĂRȚI COMPONENTE

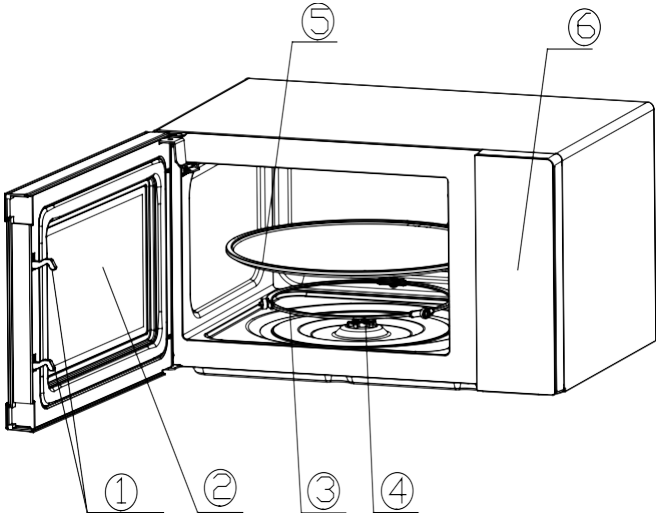

1) Încuietoarea ușii
Ușa cuptorului cu microunde trebuie să fie închisă corect pentruca aparatul să funcționeze.

2) Fereastra de vizualizare
Permite utilizatorului să observe starea procesului de gătire.

3) Inel de rotație
Platoșa de sticlă se așază pe rotițele inelului de rotație; acestasprijină platoul și îl ajută să se mențină echilibrat în timpul rotației.

4) Axul de rotație

Platoul de sticlă se așază pe axul de rotație; motorul de sub acesta pune platoul în mișcare.

5) Platoul rotativ

Mâncarea se așază pe platou; rotația acestuia în timpul funcționării ajută la gătirea uniformă a alimentelor.

⚠ ATENȚIE

- Așezați mai întâi inelul de rotație.
- Montați platoul pe axul de rotație și asigurați-vă că se fixează corect.

6) Panou de control

Detalii mai jos (panoul de control poate suferi modificărifără notificare prealabilă).


7) Capacul ghidajului de undă

Acesta se află în interiorul cuptorului, lângă peretele panoului de control.

⚠ AVERTISMENT

Nu îndepărtați niciodată capacul ghidajului de undă.

FUNCȚIONAREA PANOULUI DE CONTROL

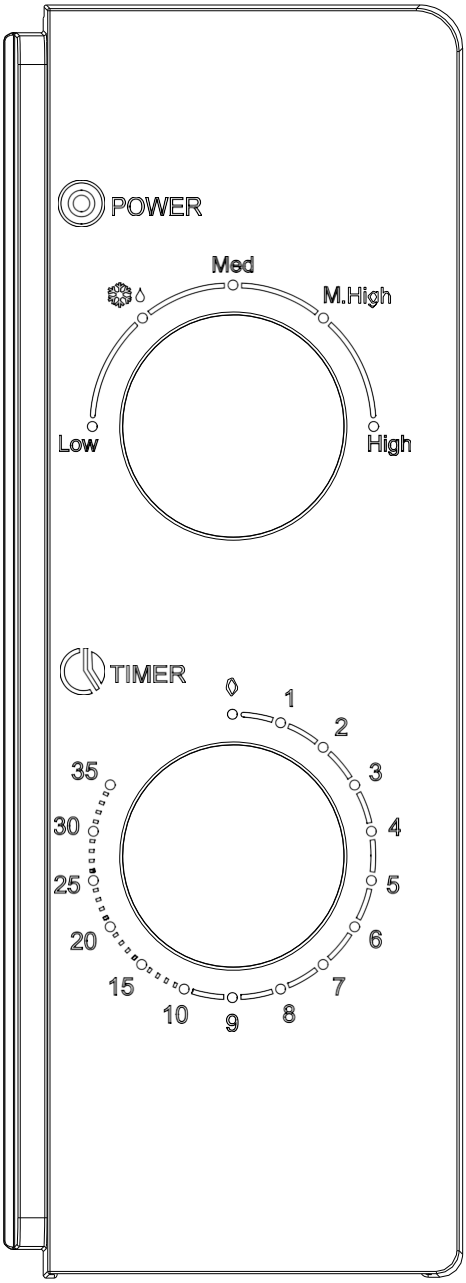

1. SETAREA CEASULUI / TEMPORIZATORULUI

Timpul maxim care poate fi setat este de 35 de minute. La finalul programului, se va auzi un semnal sonor, iar selectorul se va întoarce automat în poziția „0”.

2. FUNCȚII MICROUNDE

Nr.	PUTERE MICROUNDĂ	PROCENT PUTERE APROXIMATIVĂ
1	Redusă (Low)	Aproximativ 17%
2	Decongelare / Mediu-Redusă (Defrost / M.Low)	Aproximativ 30%
3	Medie (Med)	Aproximativ 55%
4	Mediu-Înaltă (M.High)	Aproximativ 80%
5	Maximă (High)	100%

Recomandări pentru decongelarea alimentelor:

Nr.	Greutate	Timp de decongelare
1	200g	Aproximativ 4 minute
2	400g	Aproximativ 8 minute
3	600g	Aproximativ 12 minute

FUNCȚIONARE

1) **Conectați cablul la priză**
– Înainte de a conecta aparatul, asigurați-vă că selectorul de timpeste setat pe poziția „0”.
– Nu blocați orificiile de ventilație.

2) Introduceți alimentele în cuptor și închideți ușa
– Alimentele trebuie așezate într-un recipient potrivit pentru microunde.
– Nu porniți cuptorul fără conținut (în gol), altfel se poatedeteriora.

3) Selectați nivelul dorit de putere a microundelor.

4) Cuptorul începe să funcționeze.
Dacă este necesară o pauză în timpul funcționării, deschideți ușa — funcționarea se va opri automat. Închideți ușa pentru a relua încălzirea.

5) La expirarea timpului setat, se va auzi un semnal sonor.
Becul din interior se va stinge automat.
Dacă alimentele sunt scoase înainte de terminarea timpului, **readuceți selectorul de timp în poziția „0”** pentru a preveni funcționarea în gol.

6) Se recomandă purtarea mănușilor de protecție atunci când scoateți alimentele fierbinți și **evitați atingerea pereților interiori ai cuptorului**, care pot fi foarte fierbinți.

⚠ ATENȚIE

Încălzirea este rapidă, de obicei 2–3 minute; verificati in 5 minute. Supravegheați constant starea alimentelor și ajustați timpul în

funcție de preferințe pentru a evita supraîncălzirea. În cazul preparatelor lichide precum terciul, **amestecați înainte de încălzire** și acoperiți recipientul cu folie alimentară (lăsând un colț liber pentru aerisire) sau cu un capac perforat.

La jumătatea timpului de decongelare, **deschideți ușa și întoarceți alimentele** pentru o decongelare uniformă.

GHID PRIVIND VASELE UTILIZABILE ÎN CUPTORUL CU MICROUNDE

În funcție de metoda de gătire, este esențial să folosiți vase potrivite și sigure pentru microunde. Alegerea incorectă poate afecta rezultatul preparării sau poate deteriora vasul ori cuptorul. Consultați tabelul de mai jos pentru recomandări:

Material vas	**Compatibil cu microunde**	**Observații**
Ceramică termorezistentă	Da	Nu folosiți ceramică cu margini metalice sau glazuri metalice. Se recomandă ceramică, sticlă rezistentă la temperaturi înalte și plastic special pentru microunde (peste 120°C).
Plastic termorezistent	Da	Nu este potrivit pentru gătire de durată îndelungată.
Sticlă termorezistentă	Da	—

Grătar metalic	Nu	Interzis — poate provoca scântei și deteriorări.
Folie alimentară (plastică)	Da	Nu se recomandă pentrucarne sau preparate cu os — temperaturile ridicate pot deteriora folia.

SFATURI PENTRU GATIT

- **Aranjarea alimentelor**: Puneți partea mai groasă spre margini și cea mai subțire spre centru. Evitați suprapunerile.
- **Durata gătitului**: Începeți cu intervale scurte. E maiușor să adăugați timp decât să salvați un preparat ars.
- **Gătire uniformă**: Întoarceți carnea (pui, hamburgeri, fripturi) o dată pe parcurs. Mâncarea tip tocăniță sau paste – amestecați de 1–2 ori.
- **Timp de repaus**: Lăsați mâncarea câteva minute în cuptor după ce timpul a expirat — continuă să gătească intern și se răcește treptat.

- **Semne că e gătit**:
  - Abur iese din toată suprafața, nu doar margini
  - Articulațiile de la carne se mișcă ușor
  - Fără urme de sânge la porc/pui
  - Peștele e opac și se rupe ușor cu furculița
- **Vase pentru rumenit**: Folosiți o farfurie de porțelan dedesubt pentru a proteja platoul rotativ.

- **Folii din plastic**: La alimente grase, nu lăsați folia să atingă mâncarea — se poate topi.
- **Plasticuri "microwave safe"**: Nu toate rezistă la zahăr și grăsimi înalte. Nu depășiți timpul de preîncălzire recomandat de producător.

INTRETINERE

SERVICE

Teste de bază înainte de a suna la service:

1. Pune o cană cu 150ml apă, închide bine ușa.
2. Pornește cuptorul 1 minut:
   - Se aprinde lampa?
   - Se simte aerul la gurile de ventilație din spate?
   - Se învârte platoul?
   - Se încălzește apa?

Dacă răspunsul este „NU” la oricare punct, verifică priza și siguranțele electrice. Dacă totul e în regulă, contactează un centru autorizat.

AVERTISMENTE PENTRU SERVICE
Atenție: RADIAȚII CU MICROUNDE

1. Condensatorul de înaltă tensiune poate rămâne încărcat chiar și după deconectarea cuptorului de la priză. Pentru a-l descărca în siguranță, scurtcircuitați borna negativă a condensatorului la șasiul cuptorului folosind o șurubelniță izolată, înainte de a atinge componentele interne.

2. În timpul întreținerii, următoarele componente pot fi demontate și pot expune la tensiuni mai mari de 250V față de împământare:
   - Magnetronul

- Transformatorul de înaltă tensiune
- Condensatorul de înaltă tensiune
- Dioda de înaltă tensiune
- Siguranța de înaltă tensiun


Configurarea exactă poate varia în funcție de model.

3. Următoarele situații pot duce la scurgeri periculoase deradiații cu microunde în timpul reparațiilor:
    - Montarea incorectă a magnetronului
    - Alinierea greșită sau deteriorarea sistemului deblocare al ușii, a balamalelor sau a ușii în sine
    - Asamblarea incorectă a suportului de comutator
    - Deteriorarea fizică a ușii, garniturii ușii sau acarcasei cuptorului

Eliminarea corectă a acestui produs	
	Acest simbol indică faptul că produsul nu trebuie eliminat împreună cu deșeurile menajere, în Uniunea Europeană. Pentru a preveni posibilele efecte negative asupra mediului și sănătății umane cauzate de eliminarea necontrolată a deșeurilor, acest produs trebuie reciclat responsabil, contribuind astfel la reutilizarea durabilă a resurselor materiale. Pentru returnarea dispozitivului uzat, utilizați sistemele de colectare și returnare disponibile sau contactați comerciantul de la care a fost achiziționat produsul. Acesta poate prelua produsul pentru reciclare în condiții de siguranță pentru mediu.

MICROWAVE OVEN

INSTRUCTION MANUAL

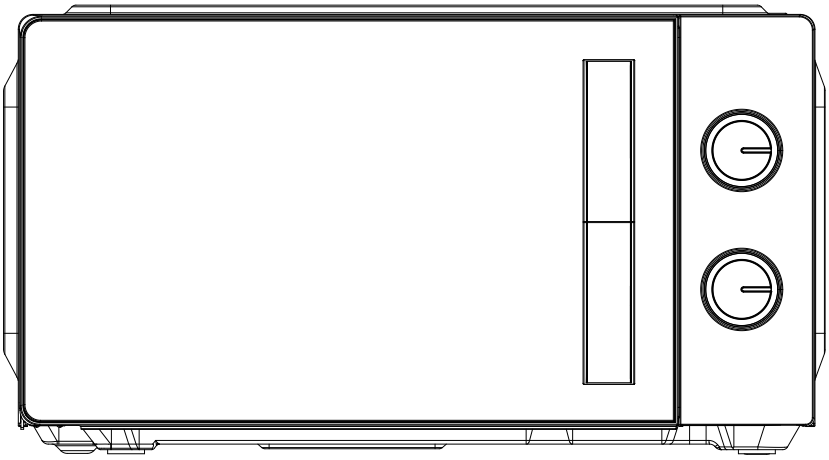

F20MXP13

IMPORTANT SAFETY INSTRUCTIONS
READ CAREFULLY AND KEEP FOR FUTURE REFERENCE
Household use only
SAVE THESE INSTRUCTIONS

IMPORTANT SAFEGUARDS

WARNING: If the door or door seals are damaged, the oven must not be operated until it has been repaired by a trained person.

WARNING: It is hazardous for anyone other than a trained person to carry out any service or repair operation, which involves the removal of any cover, which gives protection against exposure to microwave energy. WARNING: Liquids or other food must not be heated in sealed containers since they are liable to explode.

1. Only use utensils that are suitable for use in microwave ovens.
2. Metallic containers for food and beverages are not allowed during microwave cooking.
3. When heating food in plastic or paper containers, keep an eye on the oven due to the possibility of ignition.
4. The microwave oven is intended for heating food and beverages. Drying of food or clothing and heating of warming pads, slippers, sponges, damp cloth and similar may lead to risk of injury, ignition or fire.
5. If smoke is observed, switch off or unplug the appliance and keep the door closed in order to stifle any flames microwave heating of beverages can result in delayed eruptive boiling, therefore care has to be taken when handling the container.
6. The contents of feeding bottles and baby food jars are to be stirred or shaken and the temperature is to be checked before consumption, in order to avoid burns.
7. Eggs in their shell and whole hard-boiled eggs shall not be heated in microwave ovens since they may explode, even after microwave heating has ended.
8. Failure to maintain the oven in a clean condition could lead to deterioration of the surface that could adversely affect the life of the appliance and possibly result in a hazardous situation.
9. The appliance must not be placed in a cabinet.
10. Care should be taken not to displace the turntable when removing containers from the appliance.

11. The appliance shall not be cleaned with a steam cleaner.

Warning: When the appliance is operated in the combination mode, children should only use the oven under adult supervision due to the temperatures generated.



CAUTION: HOT SURFACE

12. If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
13. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
14. Children shall not play with the appliance.
15. Cleaning and user maintenance shall not be made by children without supervision.
16. Do not directly put cold water into the glass plate after use. It needs to place the glass plate for at least 20 minutes, and then put it into the water to avoid cracking.
17. Group 2 Class B appliance

    Group 2 ISM equipment: group 2 contains all ISM equipment in which radio-frequency energy is intentionally generated and/or used in the form of electromagnetic radiation for the treatment of material, and EDM and arc welding equipment.

    Class B equipment is equipment suitable for use in domestic establishments and in establishments directly connected to a low voltage power supply network which supplies buildings used for domestic purposes.
18. This product internal light source LED light on < 60lm.
19. "To be in compliance EN 61000-3-11, the product shall be connected only to a supply of the system impedance: $|Zsys| = 0.40089$ ohms or less. Before connect the product to public power network, please consult your

local power supply authority to ensure the power network meet above requirement."

20. After plug in or complete of operating, the appliance goes into off mode immediately, off mode:＜0.3W.

INSTALLATION

1. Take out all the packing. If there is a safe film over the oven, tear it off before use. Check carefully for damage. If any, immediately notify dealer or send to the manufacturer's service center.
2. Microwave ovens must be placed under dry and non-corrosiveness environments, kept away from heat and humidity, such as gas burner or water tank.
3. To ensure sufficient ventilation, the distance of the back of microwave to the wall should be at least 20 cm, the side to the wall should be at least 5 cm, the free distance above the top surface at least 20 cm. the distance of the microwave to the ground should be at least 85 cm.
4. The position of the oven shall be such that it is far from the TV, Radio or antenna as picture disturbance, or noise may occur. The distance should be more than 5m.
5. The appliance must be positioned so that the plug is accessible, and must ensure a good grounding in case leakage, ground loop can be formed to avoid electric shock.
6. The microwave oven must be operated with the door closed.
7. The microwave oven must not be placed in a cabinet. The microwave oven is intended to be used freestanding.
8. As there is manufacturing residue or oil remained on the oven cavity or

heat element, it usually would smell the odor, even a slight smoke, It is normal case and would not occur after several times use, keep the door or window open to ensure good ventilation. So it is strongly recommended to place a cup of water in the cavity, setting at high power and operate for several times.

CLEANING MICROWAVE OVEN CARE

⚠ CAUTION

The oven should be cleaned regularly and any food deposits removed.

⚠ WARNING

a. Remove the power cord from the wall outlet before cleaning. After cooling products. Don't immerse the appliance in water or other fluids when cleaning.
b. Failure to maintain the oven in a clean condition could lead to deterioration of the surface that could adversely affect the life of the appliance and possibly result in a hazardous situation.
c. Never use hard detergent, gasoline, abrasive powder or metal brush to clean any part of the appliance.
d. Do not remove the waveguide cover.
e. When the microwave oven has been used for a long time, there may be some strange odors exist in oven, following 3 methods can get rid of them:
   1) Place several lemon slices in a cup, then heat with high micro power for 2-3 min.
   2) Place a cup of red tea in oven, then heat with high micro power.
   3) Put some orange peel into oven, and then heat them with high micro power for 1 minute.
f. When the product is not used, it should be placed in dry and ventilated areas as well as possible.

⚠ WARNING

Details how to clean surfaces in contact with food:
After use wipe the waveguide cover with a damp cloth, followed by dry cloth to remove any food splashes and grease. Built -up grease may overheat and begin to cause smoke or catch fire.

TIPS FOR CLEANING

Details for cleaning door seals, cavity and adjacent parts:

Exterior:

Wipe the enclosure with a dampened soft cloth

Door:

Using a dampened soft cloth, wipe clean the door and window

Wipe the door seals and adjacent parts to remove any spill or spatter

Wipe the control panel with a slightly dampened soft cloth

Interior walls:

Wipe clean the interior surfaces with a dampened soft cloth


Wipe clean the waveguide cover to remove any food splashed

Turntable / Rotation ring / Rotation axis:

Wash with mild soap water

Rinse with clean water and allow drying thoroughly

PRODUCT INSTRUCTION

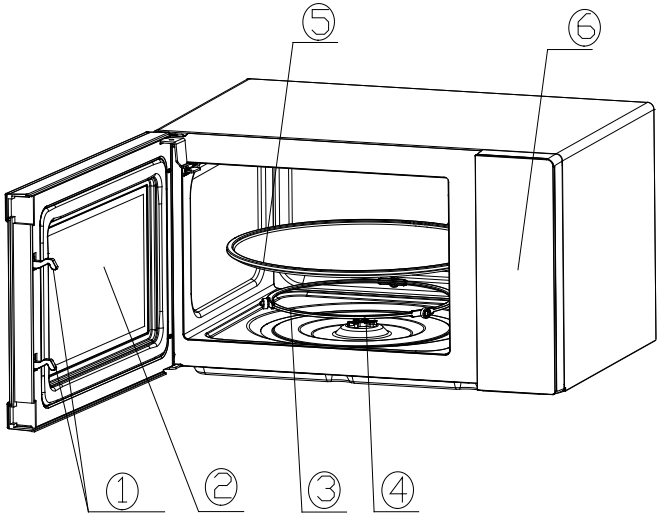



1) Door lock

Microwave oven door must be properly closed in order for it to operate

2) Viewing window

Allow user to see the cooking status

3) Rotating ring

The glass turntable sits on its wheels; it supports the turntable and helps it to balance when rotating

4) Rotating axis

The glass turntable sits on the axis; the motor underneath it drives the turntable to rotate

5) Turntable

The food sits on the turntable, its rotation during operation helps to cook food evenly

⚠ CAUTION

- Place the rotating ring first
- Fit the turntable onto the rotating axis and make sure that it is geared in properly

6) Control panel

See below in details (the control panel is subject to change without prior notice)


7) Waveguide cover

It is inside the microwave oven, next to the wall of control panel.

⚠ WARNING

Never remove the waveguide cover

OPERATION OF CONTROL PANEL

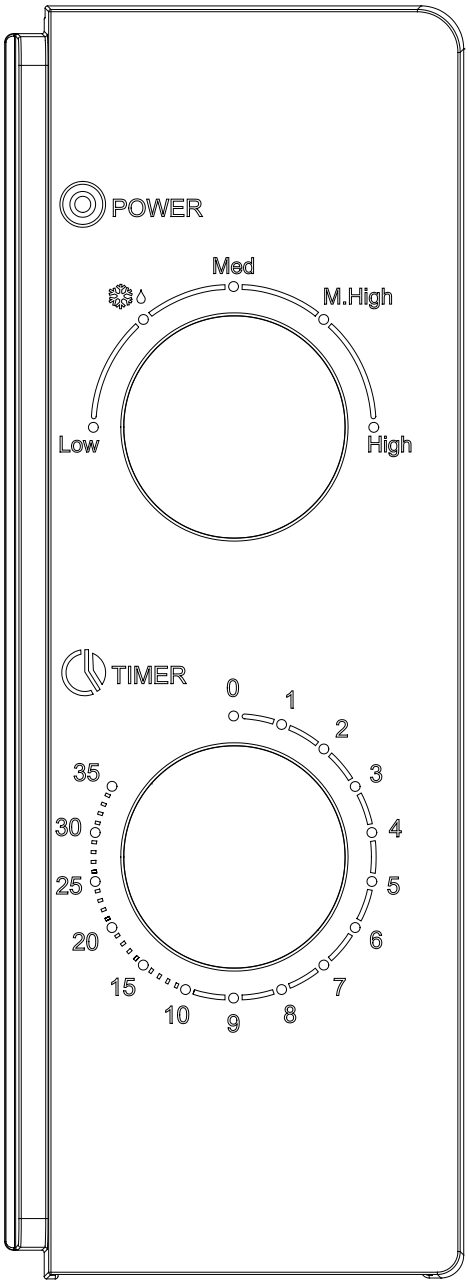

1. CLOCK SETTING

The maximum setting is 35 minutes, there is a ringtone at the end, and the knob returns to the “0” position.

2. MICROWAVE FUNCTION

No.	MICROWAVE POWER	MICROWAVE OUTPUT RATIO
1	Low	About 17% power output
2	Defrost/M.Low	About 30% power output
3	Med	About 55% power output
4	M.High	About 80% power output
5	High	100% power output

Below is some food defrosting time advice:

No.	Weight (g)	Defrost time
1	200g	About 4 minutes
2	400g	About 8 minutes
3	600g	About 12 minutes

OPERATION

1) Connect the cord
-Before connecting the cord, make sure the timer is set to “0” position.
- Do not block the ventilation.

2) Place the food on the glass turntable tray and close the door
- Food must be contained in a utensil.

- Do not operate the microwave oven without load, otherwise it will cause damage to the microwave oven.

3) Select the desired microwave power level.

4) The microwave oven starts running. If pausing in midway is needed, just open the door at any time, and close it to resume operation.

5) When it times out and cooking ends, the microwave oven produces a bell ring, the inside lamp will also be automatically turned off.
If food is removed before time out, make sure to set back the timer to “0” position, this avoids the microwave oven from operating in empty load.

6) It is recommended to wear gloves when removing the cooked food from oven and be careful do not touch the inner wall of cavity.

⚠ CAUTION

Heating food fast, generally only 2 to 3 minutes, please control in 5 minutes. Please pay attention to the cooking condition of the food at any time and adjust it according to your taste preference. Avoid overheating. When heating porridge, congee, should first stir evenly, and then covered with plastic film (leave corners for ventilation) or with a perforated lid heating.

At mid-point to defrosting time, please open the door to turn the food, so that the defrosting effect is more uniform.

UTENSILS GUIDELINE

Depending on the cooking method, it is necessary to choose a safe and suitable vessel. If it is not properly selected, it will not only affect the cooking effect, but also cause damage to the vessel or microwave oven. Please refer to the table below for use:

Material of container	Microwave	Notes
Heat-resistant ceramic	Yes	Never use the ceramics which are decorated with metal rim or glazed. Recommend using ceramics, high-temperature resistant glass, and plastic containers that can withstand temperatures above 120℃.
Heat-resistant plastic	Yes	Cannot be used for long time microwave cooking
Heat-resistant glass	Yes	
Grill rack	No	
Plastic film	Yes	It should not be used when cooking meat or chops as the over-temperature may do damage to the film

COOKING TIPS

The following factors may affect the cooking result:

Food arrangement

Place thicker areas towards outside of dish, the thinner part towards the centre and spread it evenly. Do not overlap if possible.

Cooking time length

Start cooking with a short time setting, evaluate it after it times out and extend it according to the actual need. Over cooking may result in smoke and burns.

Cooking food evenly

Food such as chicken, hamburger or steak should be turned once during cooking.

Depending on the type of food, if applicable, stir it from outside to centre of

dish once or twice during cooking

Allow standing time

After cooking times out, leave the food in the oven for an adequate length of time, this allows it to complete its cooking cycle and cooling it down in a gradual manner

Whether the food is done

Color and hardness of food help to determine if it is done, these include:

- Steam coming out from all parts of food, not just the edge
- Joints of poultry can be moved easily
- Pork or poultry shows no signs of blood
- Fish is opaque and can be sliced easily with a fork

Browning dish

When using a browning dish or self-heating container, always place a heat-resistant insulator such as a porcelain plate under it to prevent damage to the turntable and rotating ring.

Microwave safe plastic wrap

When cooking food with high fat content, do not allow the plastic wrap come into contact with food as it may melt

Microwave safe plastic cookware

Some microwave safe plastic cookware might not be suitable for cooking foods with high fat and sugar content. Also, the preheating time specified in the dish instruction manual must not be exceeded.

MAINTENANCE

SERVICING

Please check the following before calling for services.

1. Place one cup of water (approx.150ml) in a glass measure in the oven and close the door securely. Oven lamp should go off if the door is closed properly. Let the oven work for 1 min.
2. Does the oven lamp light?
3. Does the cooling fan work?

(Put your hand over the rear ventilation openings.)

4. Does the turntable rotate?
   (The turntable can rotate clockwise or counter clockwise. This is quite normal.)
5. Is the water inside the oven hot?

If “NO” is the answer to any of the above questions, please check your wall socket and the fuse in your meter box.

If both the wall socket and the fuse are functioning properly, CONTACT YOUR NEAREST SERVICE CENTER APPROVED.

SERVICING SAFEGUARDS

Caution: MICROWAVE RADIATION

1. The high voltage capacitor remains charge after disconnection; short the negative terminal of H. V capacitor to the oven chassis (use a screwdriver) to discharge before touching.
2. During servicing below listed parts are liable to be removed and give access to potentials above 250V to earth.
   - Magnetron
   - High voltage transformer
   - High voltage capacitor
   - High voltage diode
   - High voltage fuse

   The actual configuration in order to prevail in kind.
3. The following conditions may cause undue microwave exposure during servicing.
   - Improper fitting of magnetron;
   - Improper matching of door interlock, door hinge and door;
   - Improper fitting of switch support;
   - Door, door seal or enclosure has been damaged.

Correct disposal of this product	
	This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.